



Upgrading the Firmware

Document Version	1.6	Release Date	05 Sep 2022
------------------	-----	--------------	-------------

Application information	Generic
Vehicle	Not Applicable
Model	Not Applicable
Year of manufacture	Not Applicable
PowerTRONIC application	All PowerTRONIC ECUs, from firmware version F.3.x onward

Note:

- Read through all instructions before installation and use.
- Ensure that the bike is switched off and the key is out of the ignition before proceeding with the installation.
- Some parts of the bikes might be hot/sharp and may cause burns/cuts. Proceed with extreme caution or wait until the bike has cooled down. Always wear safety gloves.
- When the installation is complete, make sure to secure the wiring loom away from the movable parts or components which tend to heat up during the normal operation of the vehicle at any chance.
- PowerTRONIC is intended for motorsport use on a closed course, please check with your local laws before using this product. Race Dynamics / PowerTRONIC is not liable for consequences arising out of using the product.

Support

Call/Whatsapp: +91 99162 29292 / +91 80409 29292 E-Mail: <u>support@powertronicECU.com</u> Website: <u>www.powertronicECU.com</u>



PowerTRONIC

REQUIREMENTS:

1) Windows PC with Genuine Windows Operating System (7/8/10) and have R-Tune software installed.

- (Refer R-Tune installation document)
- 2) Any file extracting software preinstalled (ex Winrar, Winzip, 7Zip)
- 3) Uninterrupted power supply.
- 4) USB Cable (A to B) provided within the kit.

WARNING:

1) Disconnect the ECU from the vehicle and 24-pin main connector before upgrading firmware.

2) The upgrade process after selecting the firmware file is automated. If the ECU is

upgradeable/compatible with the new firmware version file, it will automatically start the process. If the ECU is not compatible with the new firmware version file, it will ask you to check for the correct upgrade version. At this point, you can cancel the process.

3) DO NOT touch/move the ECU once the upgrade process is started.

4) DO NOT click/turn off the computer once the upgrade process is started.

5) DO NOT remove the USB cable once the upgrade process is started.

6) In case the process is not successfully completed or got stuck at any stage of the upgrade process, please contact the support team, before trying multiple times.






Downloading the firmware file.

1) Go to www.powertronicecu.com



2) Click on **Downloads**

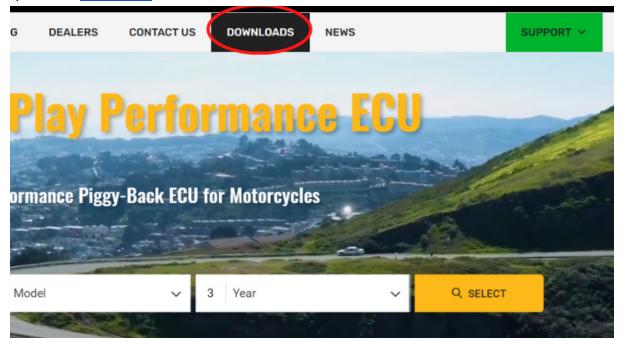






3) You will be directed to the *Downloads* section.

	SHOP Y BLOG	DEALERS	CONTACT US	DOWNLOADS	NEWS	SUPPORT ~
Home > Downloads						
Downloads						
Alerts						×
PLEASE USE THE PROVIDED USB 1	TUNING CABLE ONLY					^
Alerts						×
BEFORE INSTALLING R-TUNE PLEA	ASE DOWNLOAD AND INSTALL A	PPROPRIATE R-TUN	E USB DRIVERS			
	0				æ	
R-TUNE	E (VERSION 3.0.5.5)				UNE USB DRIVERS	
D Turne Devent TDONIO is sure full faced					turner and the D Turne Cofference to me	2
R-Tune PowerTRONIC is our full feat		FIRONIG range of EGU	IS.	Windows USB Dr	ivers required for R-Tune Software to ru	n.
R-Tune PowerTRONIC is our full feat	tured Tuning Interface for the Powe	FIRONIC range of EGU	IS.	Windows USB Dr	ivers required for R-Tune Software to ru	
R-Tune PowerTRONIC is our full feat		TIKUNIG TANGE OF EGU	IS.			n. Chat with PowerTR(


4) Scroll Down and you can see the Firmware file link and the instructions document link.

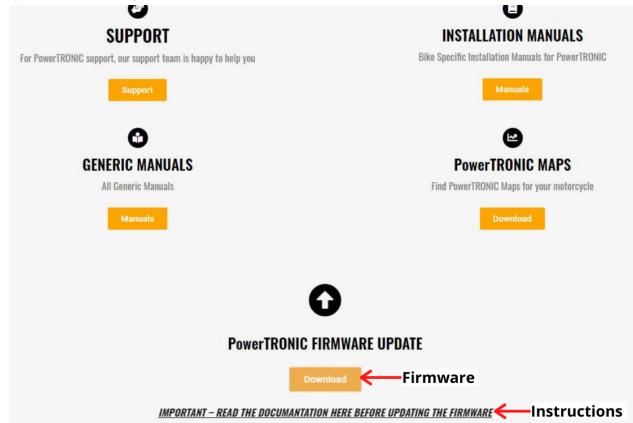





5)Click on them to download both. Refer the document before proceeding with the firmware upgrade process.

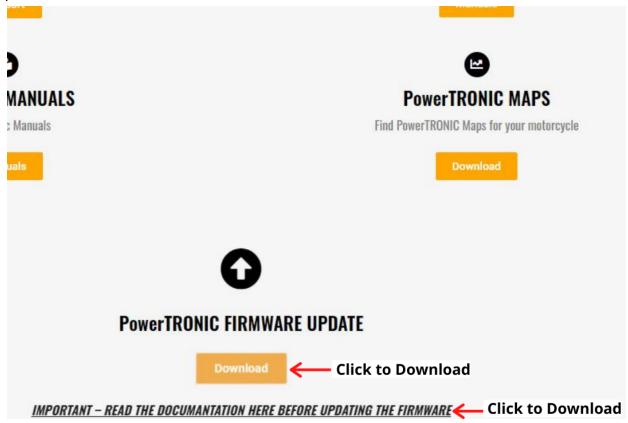


6)The compressed firmware file will be downloaded to your file folder. Refer to the image below.

Clipboard Organize New Open Selet → · · · · · · · · · · · · · · · · · · ·	the Could County Dealer	t py path Move to *	Copy to	New item •	Properties	Select all Select none Invert selection
Name Date modified Type Size OneDrive Size Size Size This PC 3 D Objects Size Size Desktop Downloads Nusic Size Pictures Videos Size Size	Clipboard		Organize	New	Open	Select
Name Date modified Type Size NoneDrive This PC 3 3D Objects Desktop Downloads Music Pictures Videos Local Disk (C:)	\leftarrow \rightarrow \checkmark \uparrow 📜 $>$ This PC	C > New Volume (D:) > Firmware > F3L			
Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-2020 12:13 PM WinRAR archive 52 KB Image: Fal. 02-09-20		Name	^	Date modified	Туре	Size
 OneDrive OneDrive This PC 3D Objects Desktop Documents Downloads Music Pictures Videos Local Disk (C:) 	Realized access	F3L		02-09-2020 12:13	PM WinRAR arc	hive 52 KB
	and the second second second second second second					
	 Desktop Documents Downloads Music Pictures Videos 					






7) Unzip or Extract the file using any file extracting software preinstalled (ex Winrar, Winzip, 7Zip) Refer to the image below. Here we are extracting the file using WinRAR software.

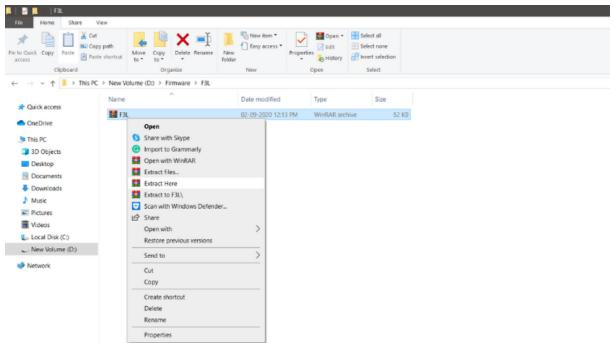

8) After extraction the firmware file will be available in the folder in the format of **.***frm* file. Refer to the image below.

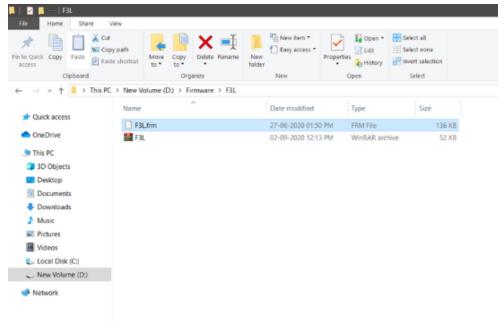






Upgrading the firmware.

- 1. Connect PowerTRONIC ECU to the R-Tune software using the BAFO cable provided.
 - a) Select appropriate com port number
 - b) Click on Connect (Refer R-Tune installation and connecting to the ECU document)
 - c) Go to the Firmware tab (Refer the image)

p Description		COM	3		0			RPM	
		Ç.	Disconnect			Conne	ected	500	
alib 1	Tab	Graph	Dia	s Fi	rmware				Throttle Position
0000	10500	11000	11500	12000	12500	13000	13500	14000	3940
	4	4	4	4	4	-3	-1	-5	10
	4	4	4	4	4	-3	-1	-5	Injector Ref Load
	4	4	4	4	4	-3	-1	-5	0
	4	4	4	4	4	-3	-1	-5	0
	1	0	0	-3	-3	0	-1	-5	Load Input
	1	0	0	-3	-3	-4	-6	-6	Throttle Position
	0	0	0	0	0	0	0	0	Througer control
	0	0	0	0	0	0	0	0	Load Input %
	0	0	0	0	0	0	0	0	0
	0	0	0	0	0	0	0	0	
	0	0	0	0	0	0	0	0	RPM Extend
	0		10	0	10	0	0		


2. Click Upgrade Firmware option

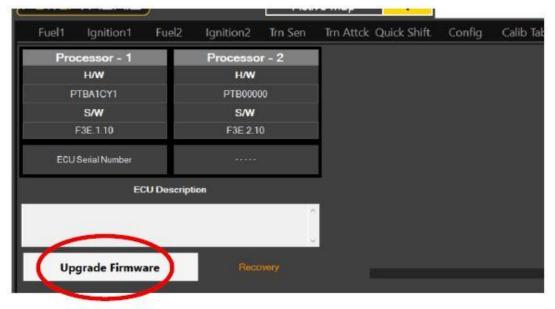





3.Read through the instructions displayed and click **OK**.

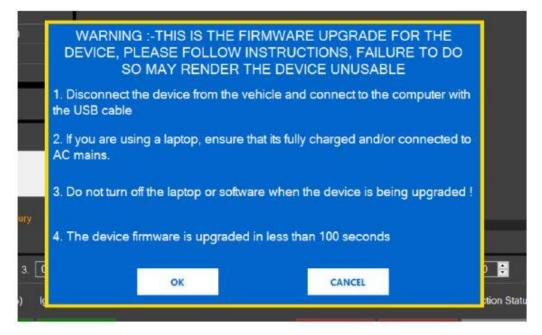

4. Click Okay.

Select file	
Please select .frm file	
	ОК





5. Select the firmware file from the file manager and click **Open**.

F3L				
Home Share View Share View Copy Paste shortcut Cipboard	Move Copy to Copyanize	New New New New New New	perties to be not to be no	Select all Select none Invert selection Select
	olume (D:) > Firmware > F3L			
Name	^	Date modified	Туре	Size
uick access	.frm	27-06-2020 01:50 PM	FRM File	136 KB
iis PC Dobjects Desktop Documents Downloads Music Pictures Videos				

6. The firmware upgrade process will start automatically. Refer the Image below.

werTRONIC R-Tune 3.0.9 • Tools Help						1ap Description		_		-	
Tools Help					· ·	ap Description		COM11	v .	2	RPM
owerTRO		L	Active Map	1				U Disc	onnect	Connected	500
Fuel1 Ignitio	on1 Fuel2	Ignition2 Ti	rn Sen Trn Atto	k Quick Shift	Config	Calib Tab	Graph	Dials	Firmware		Throttle Position
Processor	- 1	Processor -	2					PROCESSO			10
H/W		H/W						FIRMWARE UP	GRADE MODE		Injector Ref Loa
PTB00000)							MEMORY ERA	SE INITIATED		0
S/W F3H.2.00		S/W						Please wait			Load Input
130.2.00								MEMORY ERA			Throttle Positic
ECU Serial Nur	nber										Load Input %
	ECU Descriptio	on						PROGRAMIMG			0
			<u>^</u>					Please wait			RPM Extend
											No
			v		RADE COMPLE						CoProcessor Pres
Upgrade F	irmware			FROOTOPC		120					CKP Decode
											Crank Signal Typ
ວ[%]: 1.[0.0 🜻 2.	0.0 🗧 3.	. 0.0 🗧 4.	0.0 븆	ITC [dg] :	1. 0 🜻	l 2	0 🗧	3. 0 🜻	4. 0 븆	Not Present
ן זען. גען אין אין גען	0.0 🗸 2.	0.0 🗸 3.	4.	0.0	no (ugj .	1.			J. U V	*	Noise Capture
	Original Inj PW	Fuel Trim (%)	Ignition Adv(deg)	Injec	tor Duty (%)	Inject	or Status	Ignition Status	Traction Status	TrcRPM Status	16
Cylinder-1	0.000					N	D_SIG	NO_SIG		0	Stock Fuel Cut
Cylinder-2	0.000					N	D_SIG	NO_SIG		0	<u> </u>
Cylinder-3	0.000						D_SIG	NO_SIG		0	Stock Ign Cut
Cylinder-4	0.000					N	D_SIG	NO_SIG		0	ON
											Traction Counte
Send Recei	ve Burn	Lock + Burn S	Status:Connected	to ECU							0

Caution: Upgrading the ECU would wipe all existing data on the ECU. Please make sure you have a fully charged battery or are connected to a power source for uninterrupted process.





7. Once the upgrade process is finished, one pop-up window will appear and ask you to remove the USB cable from the laptop and connect. Click on **OK** and remove the USB from Desktop/Laptop and Connect again.

2.00	Please wait MEMORY EF			Please wait MEMORY ER	ASED
	Upgrade Status			memorri en	
	Firmware upgrade don PLEASE REMOVE USI		TOP/DESKTOF	P AND CONNEC	TED
өсоvөгу				ок	COMPLETED
3. 0.0	0 ÷ 4. 0.0 ÷	ITC [dg] :	1. 0 🗧	2. 0 븆	3. 0 🛱

8. You can verify the firmware version after reconnecting and receiving data from ECU. Refer to the image below.

PowerTRONIC R-Tune 3.0.5.5						
File Tools Help						Map
PowerTRONIC		Activ	е Мар	1		
Fuel1 Ignition1 Fue	el2 Ignition2	Trn Sen	Trn Attck	Quick Shift.	Config	Cal
Processor - 1	Processor	- 2				
H/W	H/W					
PTBA2CY1	PTB00000)				
S/W	S/W					
F3L.1.00	F3L.2.00					
ECU Serial Number						
ECU De:	scription					
		^				
	_	Ŷ				
Upgrade Firmware	Recov	югу				

---/End of Document/---